 




NOTE:

SWITCH LOGIC CHANGED BY REVERSING FLOAT.

1. REMOVE SPRING CLIP FROM BOTTOM OF FLOAT.
2. REMOVE FLOAT FROM STEM AND TURN FLOAT UPSIDE-DOWN
3. REINSTALL FLOAT ON STEM AND REPLACE SPRING CLIP.

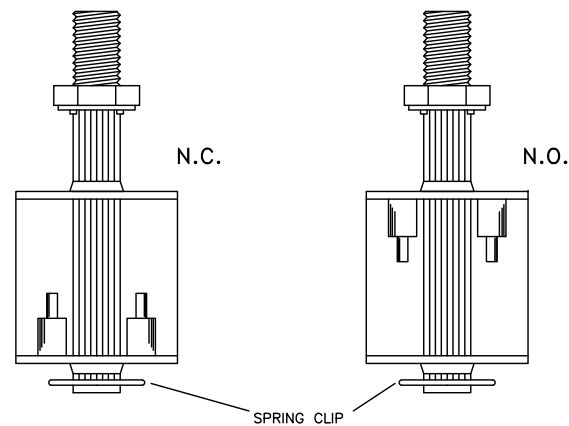

TYPICAL VERTICAL FLOATSWITCH PLUMBING ASSEMBLY

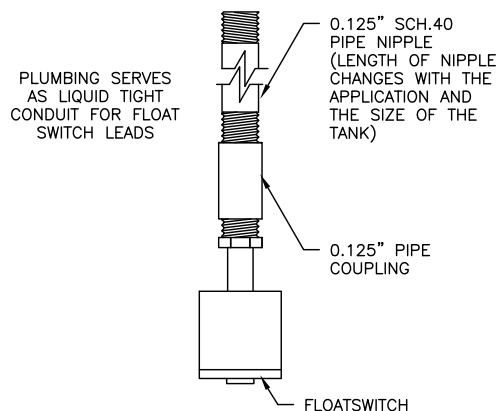



CALIBRATED FOR PERCENT LEVEL



WARNING!!

FOR USE WITH FUEL OIL, WATER OR OTHER APPROVED CLASS II OR NON-FLAMMABLE LIQUIDS

NOT FOR USE WITH GASOLINE OR ANY CLASS I LIQUID OR ANY LIQUID HAVING A FLASH POINT OF LESS THAN 100°F
EXPLOSION/FIRE HAZARD
NOT FOR USE IN A HAZARDOUS ENVIRONMENT

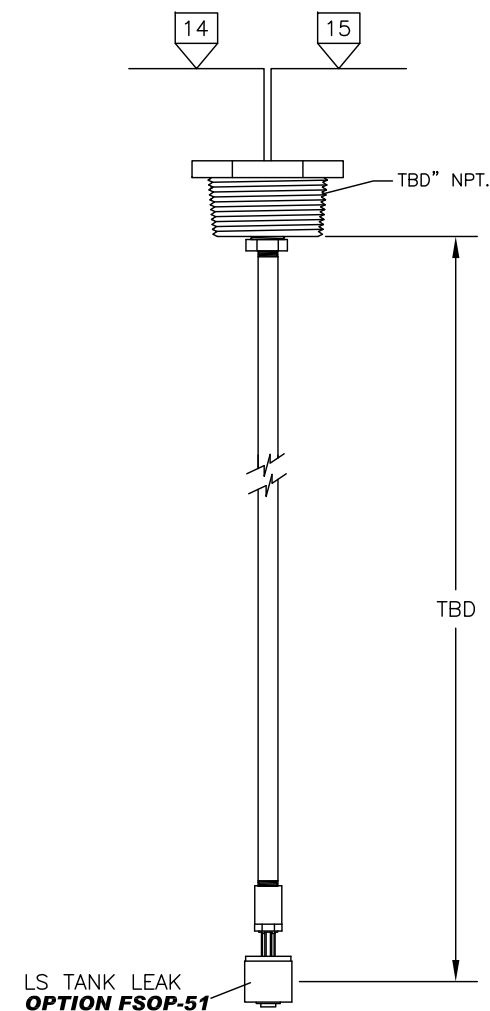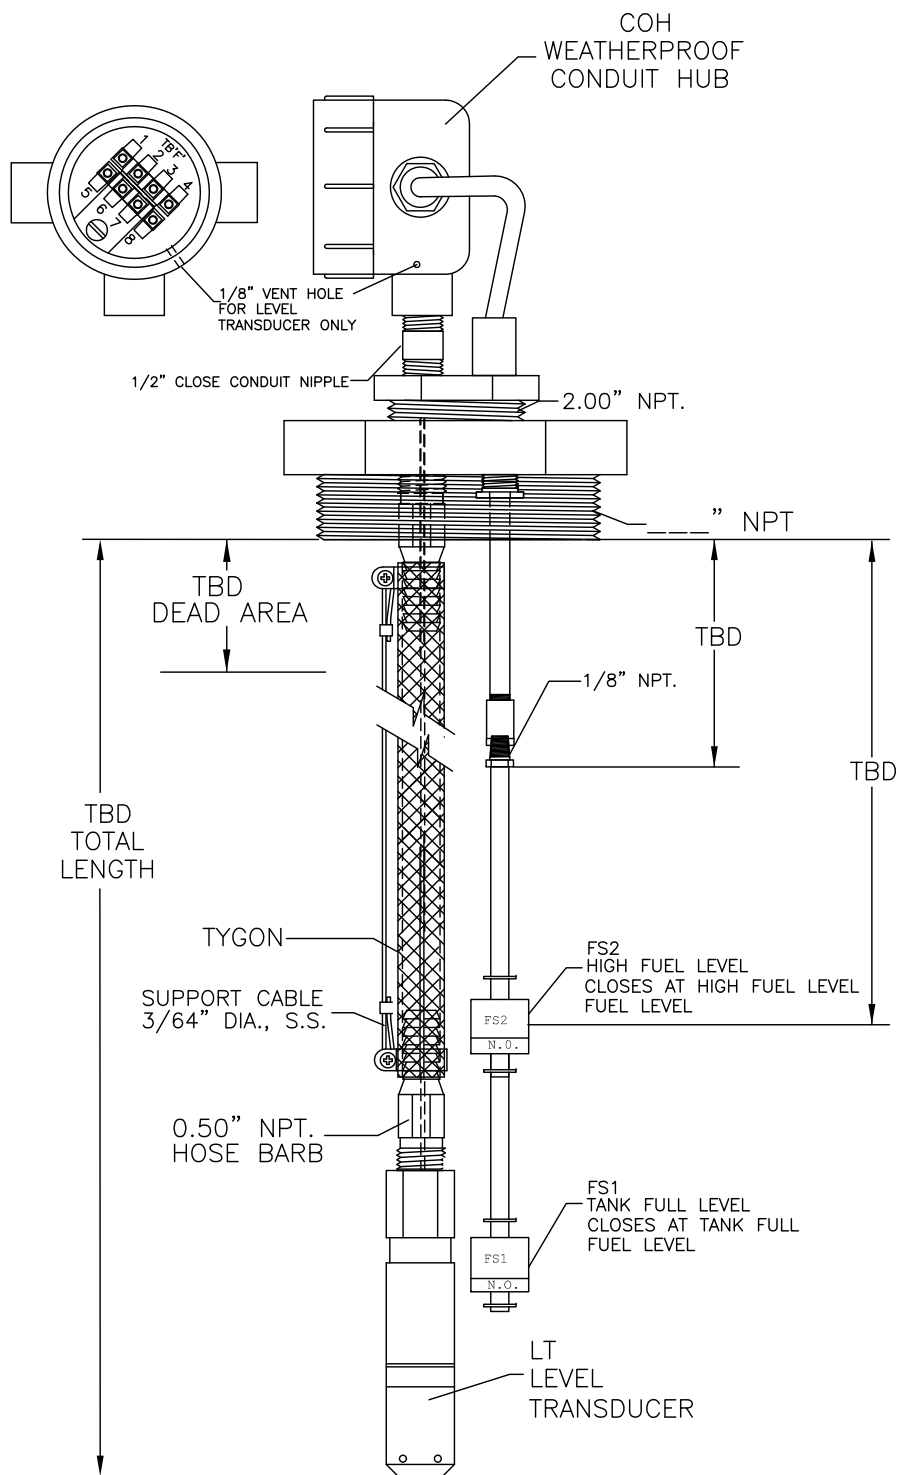

THE INFORMATION HEREON IS THE PROPERTY OF SIMPLEX, INC., AND/OR ITS SUBSIDIARIES. WITHOUT WRITTEN PERMISSION ANY COPYING, TRANSMITTAL TO OTHERS AND USE EXCEPT THAT FOR WHICH IT IS LOANED IS PROHIBITED. DESIGN SUBJECT TO CHANGE WITHOUT NOTICE.
©2010 SIMPLEX, INC. ALL RIGHTS RESERVED.

SIMPLEX			SPRINGFIELD, ILLINOIS
SCALE :	APPROVED BY :	DRAWN BY : RER	
DATE : 08-10-10		REVISED :	
LEVEL TRANSDUCER PICTORIAL			
STANDARD			DRAWING NUMBER 211994